




KTM 790/1090/1190/1290 Spacer Kit Installation Instructions

Install these spacers in place of the handles to secure the tail rack, tidying the bike's tail and making the MoJavi Saddlebag, Coyote Saddlebag, Great Basin Saddlebag and Siskiyou Panniers fit these motorcycles like they were designed specifically for them.

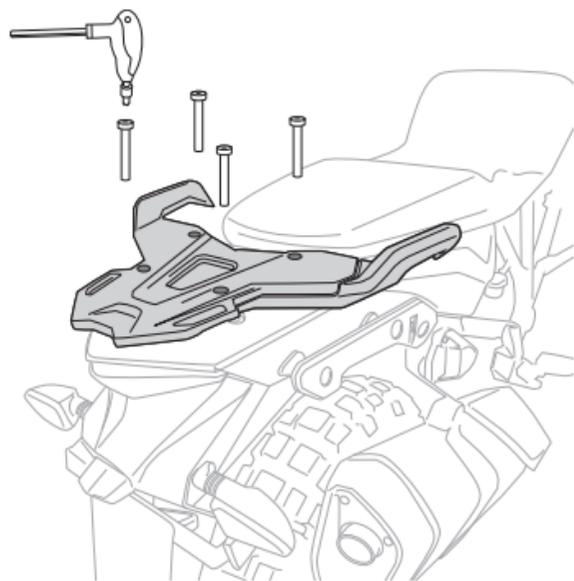

1

Remove rack and handles


Using the KTM tool, remove the four bolts securing the rack and handles to the frame.

Lift the rack away from frame, and remove both the left and right passenger handles.

804882



8 16205 02032 9

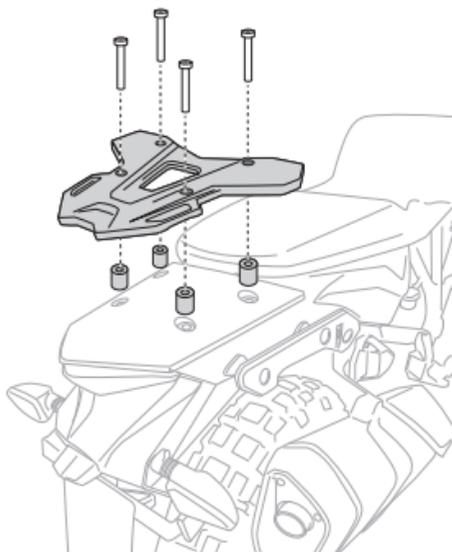


2

Insert each of the four spacers inside the rack mount holes. Lay the rack over the spacers, careful to align the holes with the spacers underneath.



Use thread lock on bolts to prevent them from vibrating loose.

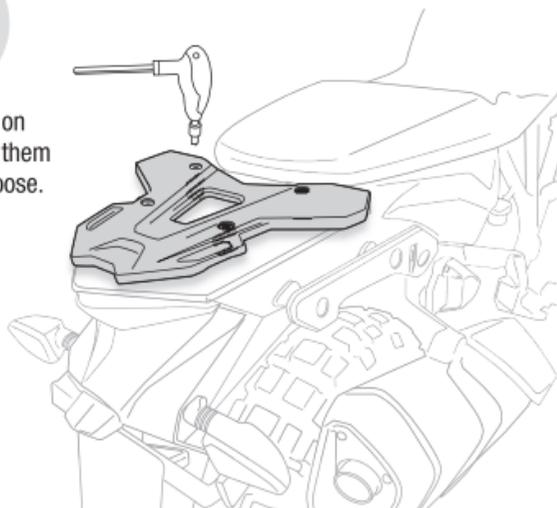

3

Finger tighten all four bolts into place for several turns to avoid cross threading. Use the KTM tool to tighten.